

ASSEMBLY INSTRUCTIONS FOR THE DC/BULK CART


Step 1 - Insert metal side wall into base. Side wall label should be facing out. Use foot to guide kick-plate into position.



Step 2 - Use the side of your heel to kick metal kick-plate into locking position. Repeat steps for second metal side wall.




Step 3 - When side rails are assembled to the base, add desired number of shelves.


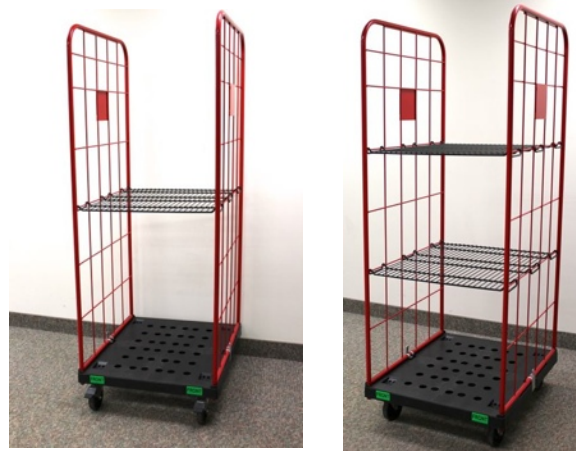


If you have any questions, please call customer service at 1-855-333-4943 or email at: info@effizientllc.com


STABILIZER BARS

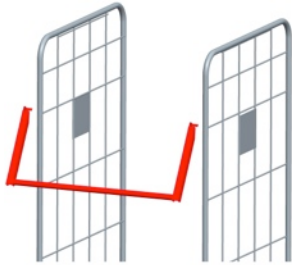

Step 1. Align the slots on the arm of the stabilizer bar with the horizontal cross bar of the sidewall.

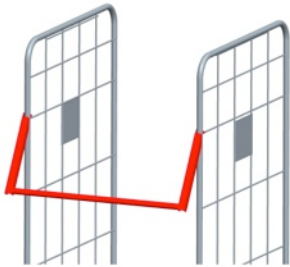
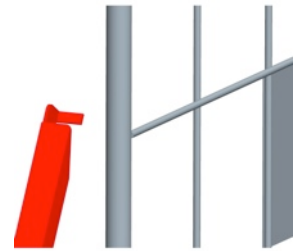


Step 2. Hook stabilizer bar to sidewall. Making sure the hook on stabilizer bar sits on top of cross bar.

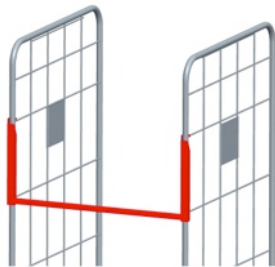

Step 3. Once both sides of the stabilizer bar is hooked onto the sidewalls, push bar down. You can either snap the bar into lock position or tap it into lock position with rubber mallet.

Repeat this step for second stabilizer bar.

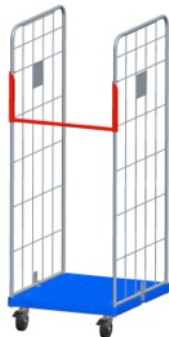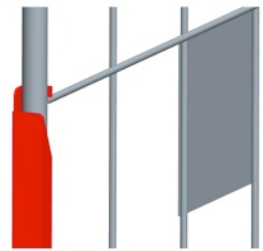


If you have any questions, please call customer service at 1-855-333-4943 or email at: info@effizientllc.com

HOOK STRAPS

Step 1 - Attach 2 hook straps per side panel. Choose either side panel to wrap one end of strap around. Thread hook end through loop end of strap.



Step 2 - Place hook end onto sidewall

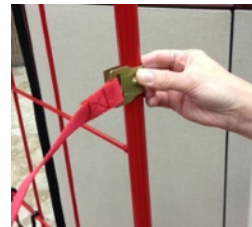

Step 3 - Tighten straps as needed.



Assembled DC/Bulk



If you have any questions, please call customer service at 1-855-333-4943 or email at: info@effizientllc.com